

Radiator Protective Cover for Harley Pan America 1250

VST-010103-004



BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This Radiator Protective Cover is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove two screws of the original frame for standby.

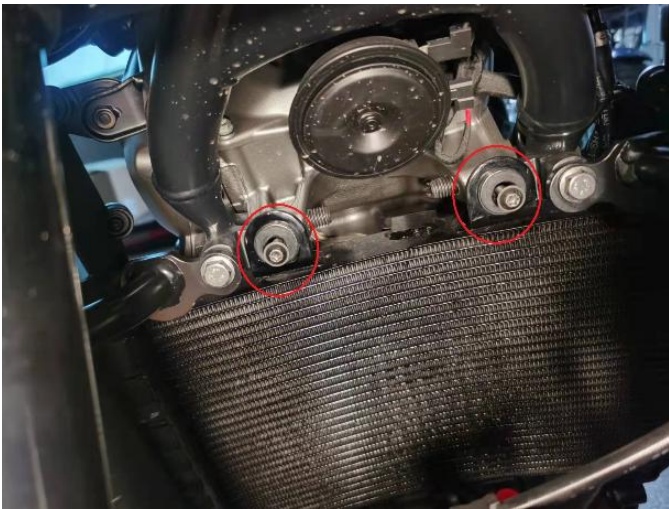

3. Clamp the two ends of the water tank protective cover into the rubber parts of the frame, and fix the upper end of the water tank with the two removed screws. The installation is complete.

