


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This HEADLIGHT GUARD PROTECTOR KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

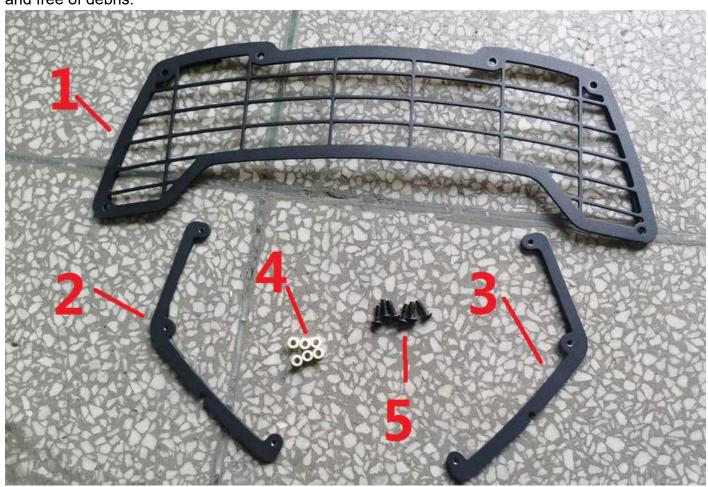

REF	QTY	PART DESCRIPTION
1	1	Iron net
2	1	Iron support L
3	1	Iron support R
4	6	Lining pipe
5	6	5*10 inner hexagon screw

Headlight Guard Protector for Harley Pan America RA1250


VST-010103-005



INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

2. Fix the Iron support with six 5*10 inner hexagon screw into the Iron net asshown. Don't fasten the screw.

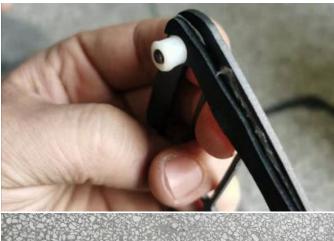



3. Clip the edge of the plastic part into the slot, fasten the screw, then installation completed.





