

LED Taillight for Harley Sportster Dyna Softail Touring Road Glide Road King

VST-010107-002



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


IMPORTANT

This LED TAILLIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Kit Contents

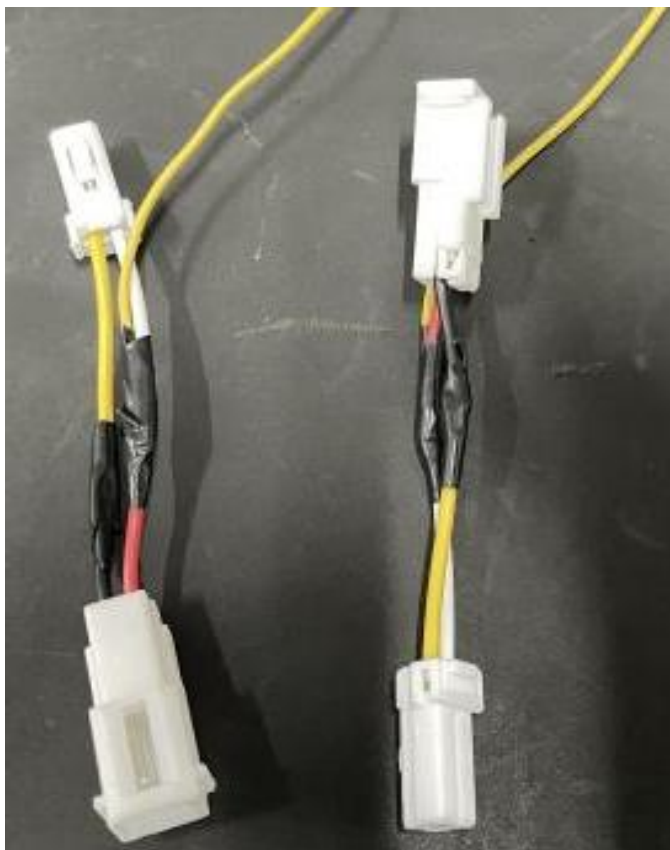


2. First unscrew the two screws fixing the original taillight for standby, unplug the harness plug-in and remove the original taillight.



LED Taillight for Harley Sportster Dyna Softail Touring Road Glide Road King

VST-010107-002

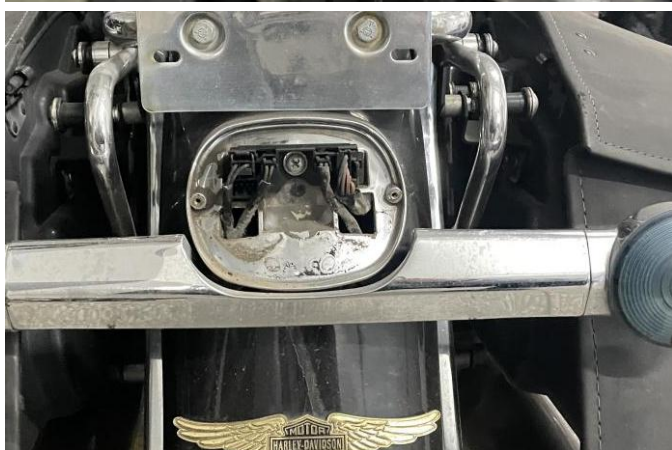

3. Unscrew the screws on both sides of the LED taillight and remove the back shell.



4. Plug the white plug-in of the LED taillight with the plug-in on the vehicle body, and the wiring steps of the harness at the other end are as follows (black wire negative, green wire low bright, red wire high bright) :





A. Turn on the power supply of the vehicle and insert the plug with black wire into the socket of the original vehicle. Test the green wire in the other three vacant jacks, find the jack that can light up the taillight (Red low brightness + white light), and leave the green wire in that jack (do not insert it tightly at the moment).

B. Test the red wire in the remaining two vacant jacks, find the jack that can light up the brake light (Red highlight, during the test, you need to step on the brake), and leave the red wire in that jack (do not plug it tightly at the moment).

C. Unplug the black plug. According to the results of steps A and B, insert the green wire and the red wire into the corresponding jack.

Notice: The wire insertion sequence is for reference only. The wire insertion sequence will be different for different models.

LED Taillight for Harley Sportster Dyna Softail Touring Road Glide Road King VST-010107-002

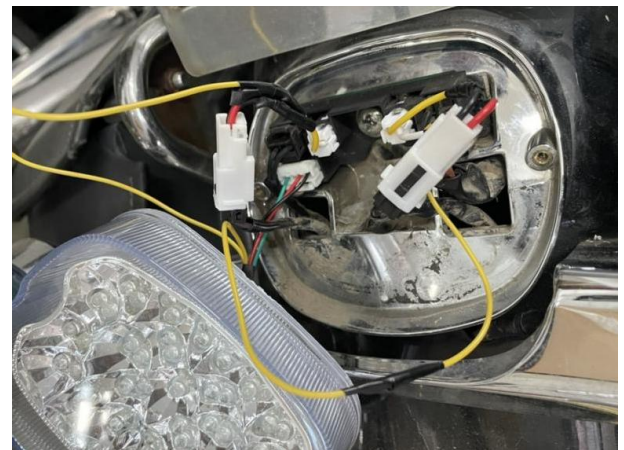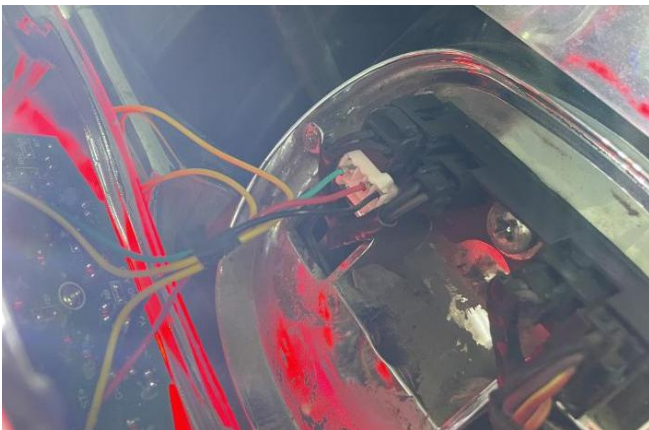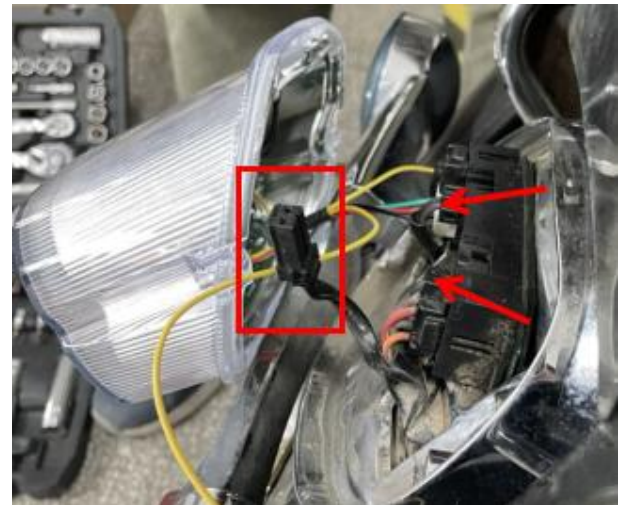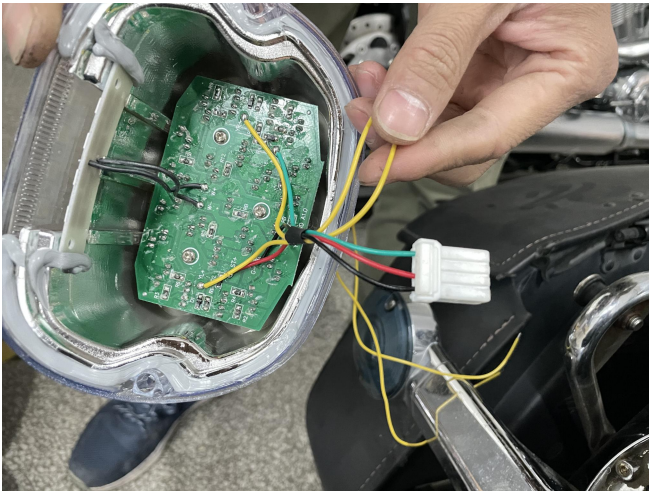

5. Unplug the plug-in of the original taillight steering function, take out the equipped wiring, connect the vehicle body plug-in at one end and the plug-in of the original taillight steering function at the other end. The yellow extension cable is connected to one of the yellow wires on the LED taillight, and insulation measures should be taken (the yellow extension cable is the steering function of the taillight, please test the left and right direction of the turn signal in advance before connecting). The adapter wires on the other side shall be installed in the same manner.

6. Tidy up the connected adapter wires, then fix the taillight.



LED Taillight for Harley Sportster Dyna Softail Touring Road Glide Road King VST-010107-002



7. Installation finished.

